




# Day-Date 40

Oyster, 40 mm, platinum

The Oyster Perpetual Day-Date 40 in platinum with a white dial, fluted bezel and a President bracelet.

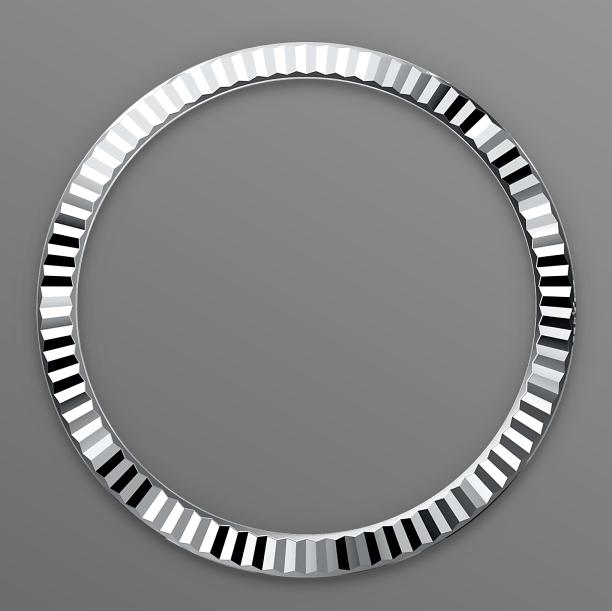


FLUTED BEZEL

# A Rolex signature

The Rolex fluted bezel is a mark of distinction. Originally, the fluting of the Oyster bezel had a functional purpose: it served to screw the bezel onto the case helping to ensure the waterproofness of the watch.

It was therefore identical to the fluting on the case back, which was also screwed onto the case for waterproofness, using specific Rolex tools. Over time, the fluting became an aesthetic element, a genuine Rolex signature feature. Today the fluted

bezel is a mark of distinction, in platinum on this Day-Date 40.

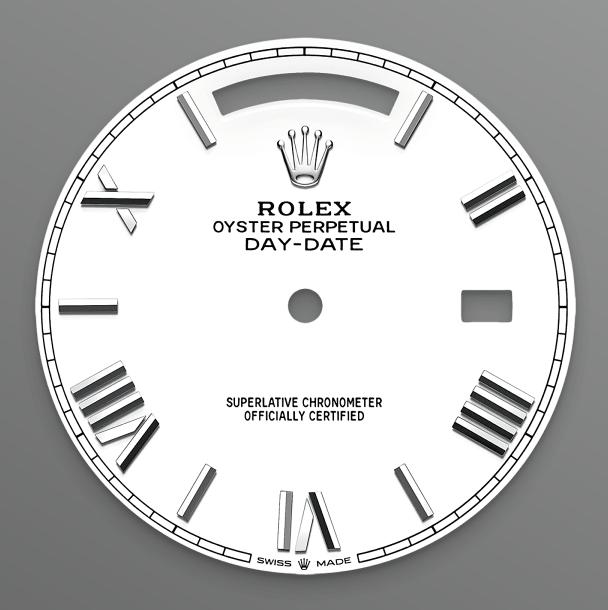

WHITE DIAL

## Limitless freedom

Lacquer combines almost limitless freedom of colour with intensity and a smooth finish. The lacquering technique consists of successively depositing six thin layers of lacquer on a brass base plate.

A colourless varnish is then applied to give the colour or shade all of its depth and shine. Once the varnish is dry, the surface of the dial is polished to magnify the colour; the dial is then ready to be pad printed and receive its appliques.




PLATINUM

# The noblest of metals

Rare and precious, platinum is striking for its silvery whiteness and vibrant luminosity. It is among the densest and heaviest metals in the world, distinguished by unique chemical and physical properties such as exceptional corrosion resistance.

Paradoxically, it is also soft, elastic and highly malleable, which makes machining and polishing especially difficult, demanding an extremely high degree of skill. Rolex always uses 950 platinum, an alloy consisting of 950% (thousandths)

platinum, painstakingly crafted in-house by the fine metalworkers at Rolex. The noblest of metals for the finest of watches.

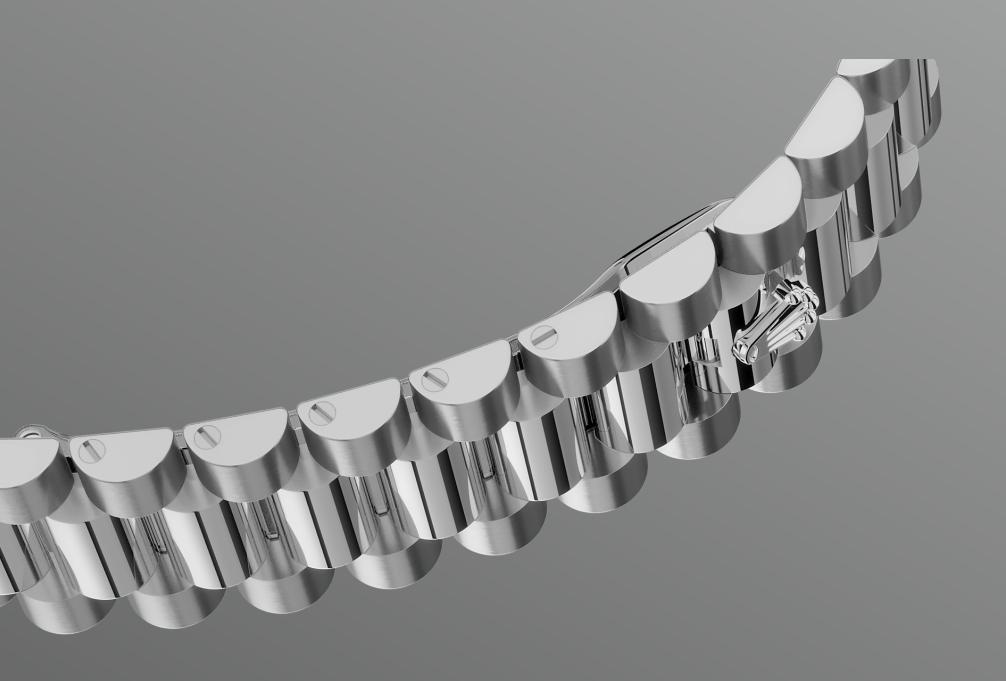

THE PRESIDENT BRACELET

## The ultimate refinement

The design, development and production of Rolex bracelets and clasps, as well as the stringent tests they face, involve advanced high technology.

And, as with all the components of the watch, aesthetic controls by the human eye guarantee impeccable beauty. The President bracelet, with its semi-circular three piece links, was created in 1956 for the launch of the Oyster Perpetual Day-Date. It represents the ultimate in refinement and comfort and is always made of carefully selected precious metals.

# More technical details Day-Date

Reference 228236

### **Model Case**

#### **Type**

Oyster, 40 mm, platinum

#### **Diameter**

40 mm

#### **Material**

Platinum

#### Bezel

Fluted

#### **Oyster Architecture**

Monobloc middle case, screw-down case back and winding crown

#### **Winding Crown**

Screw-down, Twinlock double waterproofness system

#### **Crystal**

Scratch-resistant sapphire, Cyclops lens over the date

#### **Water Resistance**

Waterproof to 100 metres / 330 feet

## **Movement**

#### **Type**

Perpetual, mechanical, self-winding

#### **Calibre**

3255, Manufacture Rolex

#### **Precision**

-2/+2 sec/day, after casing

#### **Oscillator**

Paramagnetic blue Parachrom hairspring. High-performance Paraflex shock absorbers

#### Winding

Bidirectional self-winding via Perpetual rotor

#### **Power reserve**

Approximately 70 hours

#### **Functions**

Centre hour, minute and seconds hands. Instantaneous day and date in apertures, secure rapid-setting. Stop-seconds for exact time setting

## **Bracelet**

#### **Type**

President, semi-circular three-piece links

#### **Bracelet Material**

Platinum

#### Clasp

Concealed folding Crownclasp

## **Dial**

#### **Type**

White

## Certification

#### **Type**

Superlative Chronometer (COSC + Rolex certification after casing)

# Explore and discover more on Rolex.com

All intellectual property rights such as trademarks, service marks, trade names, designs and copyrights are reserved.

Nothing contained in this website may be reproduced without written permission. Rolex reserves the right at all times to modify the models featured in the present website.

